

WEB-485



WEB-485 FarmConnect interface

A Dutch, German and French version of this manual is also available on the website of www.StienenBE.com. Go to <https://www.stienenbe.com/en/> to download the desired manual.

OVERVIEW SCREEN

| WEB-485 | |
|------------------------|-----|
| Connection FarmConnect | yes |
| Connection Devices | no |
| Data Transfer | no |

CONNECTION FARMCONNECT

Connection with FarmConnect (No: Check your internet access).

CONNECTION DEVICES

 
Communication with the connected devices (via RS485 loop, climate controllers, feed computers etc.). No: Check the RS485 communication loop.

DATA TRANSFER

No: There is no data transfer between devices and FarmConnect for over more than 10 minutes (if both of the above rules indicate yes, check FarmConnect operation).

INTRODUCTION

OPERATION

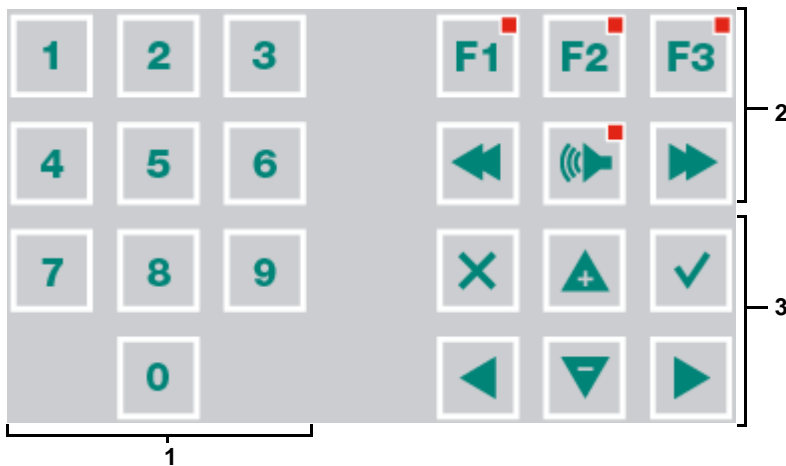

Caution!

Only press the keys with the tip of your finger. Sharp objects can damage the keyboard!

The keyboard can be divided into three basic groups:

1. Numerical keys
2. Function keys
3. Navigation keys

1 Numerical keys (0..9)

 
 
 


The numerical keys can be used to enter a screen number or edit a setting or a text.

2 Function keys

No actions have been assigned to the function keys F1, F2 and F3.

3 Navigation keys (menu, cursor, mode)



Press and hold this key to select the main menu.



Move cursor

Pressing and holding the key: move cursor to the first/last setting on the screen.

 


Move cursor or change value




- Confirm menu option
- Confirm start change
- Confirm change

MAIN MENU

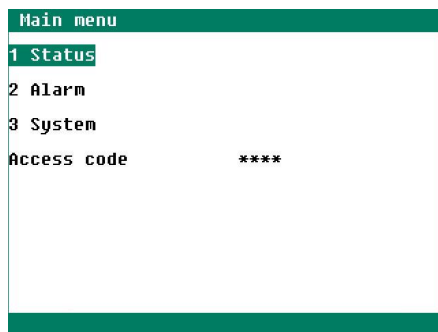

STATUS

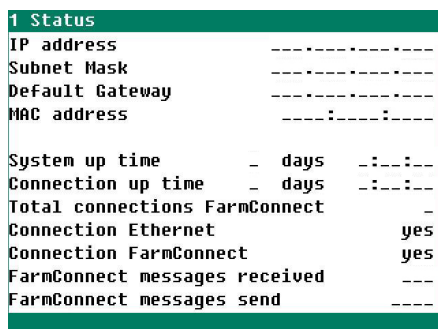 

IP address

An Internet Protocol address (IP address) is a numerical label assigned to each device connected to a network that uses the Internet Protocol for communication.

If zeros remain here on this line, after you plug in the Ethernet cable, you will not have access to the network.

Subnet Mask

This mask is unique to each device and is be configured automatically with the Dynamic Host Configuration Protocol (DHCP).

Default Gateway

A default gateway is the node in a computer network using the Internet Protocol Suite that serves as the forwarding host (router) to other networks when no other route specification matches the destination IP address of a data package.

Mac address

The Media Access Control Address (MAC address) is a unique identifier number to identify the WEB-485 in the communication network.

System up time

Duration that the WEB-485 is active after the last reset (or power down).

Connection up time

Duration of the current connection with FarmConnect after the last reset (or power down) of the WEB-485.

Total connections FarmConnect

Total number of successful connections with FarmConnect after the last reset (or power down).

Connection Ethernet

Indicates whether the WEB-485 is currently connected to Ethernet.

Connection FarmConnect

Indicates whether the WEB-485 is currently connected a FarmConnect server.

FarmConnect messages received

Number of messages received from the FarmConnect server.

FarmConnect messages send

Number of messages sent to the FarmConnect server.

ALARM

```

2 Alarm status
Main alarm on      Test no
  off no
Alarm code No alarm
Control
Alarm external house  ...
1 Latest alarms
  
```

TEST (ALARM TEST)

Test “yes”: This enables you to test the operation of the alarm relay (siren). If you enter "yes" in the **Test** line, the alarm relay (siren) will be switched on for 10 seconds.

You can clear the alarm test time by setting "no" in the **Test** line.

Alarm external house: If the alarm relay has become de-energized in one of the connected devices (there is an alarm) than that is shown here.

⌚ off (ALARM TEMPORARILY OFF)

Off: “yes”: This enables you to temporarily switch off the alarm (siren). This does not apply to the hardware alarms; they cannot be switched off temporarily. The main alarm is switched off for 30 minutes (the LED will blink irregularly). The main alarm is switched on automatically again after 30 minutes. The alarm relay will de-energize again, causing an alarm, if the cause of the alarm has not been removed.

ALARM

```

21 Alarm WEB-485
Alarm WEB-485 on
No data time 01:15
Alarm code No alarm
  
```

```

... Installation communication
Device address 001
User number 001
Baud rate 57K6
Interval FarmConnect 10 min
Master device yes
WEB-485 yes
Number of addresses in loop 001
Communication
Communication error address WEB-485
1 Remote control
  
```

Please do not change the default setting to avoid unnecessary alarms.

Example setting on external device (default 10 minutes).

Here the time period can be set after which the WEB-485 causes an alarm if no data is transferred to FarmConnect during the set time (default time is 75 minutes).

The largest time interval that can be set (by the installer) on the connected devices is 60 minutes (Interval FarmConnect). Ask the installer what time he has set and set a time here that is equal to or higher than the time set by the installer on the connected devices.

LATEST ALARMS

```

22 Latest alarms
Alarm 0  ...
Alarm code .....
Control  ...
Alarm 1  ...
Alarm code .....
Control  ...
Alarm 2  ...
Alarm code .....
Control  ...
  
```

The last 5 alarm causes, which caused the alarm relay to de-energize, are stored in the memory of the WEB-485. The dates and times of the alarms are displayed in addition to their causes. Pressing the cursor down arrow key displays the data of the previous alarms.

Alarm 0: The cause of the *most recent alarm* is displayed at “Alarm 0”, in addition to the time until which the alarm has been/was active. Press the down arrow key to display the data of the previous alarms.

| Alarm code | Description |
|-------------------------|----------------------------------------------------|
| Module 0 not responding | Module address 0 is not found, check the hardware. |

SYSTEM

```
3 System
Device          WEB-485
Type            178
Software version -----
Software date   --/--/----
ENG            ENG

1 Date/Time      3 Display
2 Remote control
```

The “System” screen shows the device name, the device type (178=WEB-485), the program version, program date.

Change language: Hold down the F1 key and press the right cursor key.

DATE/TIME

```
31 Date/Time
Time           16:27h
Year          ----
Month         --
Day           --
```

The date and time can be set in this window.

DISPLAY

```
33 Display
Brightness
on            100%
off          015%
On-time      500s
Cursor left  yes
```

- Brightness** To set the brightness of the background lighting
 - on** To set the brightness of the active situation (operating mode).
 - off** To set the sleep mode brightness.
 - On-time** Number of seconds during which the screen is lit after the last time a key is pressed. Setting 0 seconds does not switch off the screen lighting.
- Cursor left** “yes” When changing a setting, the cursor is placed on the digit which is the furthest to the left.
“no” When changing a setting, the cursor is placed on the digit which is the furthest to the right..

REMOTE CONTROL

```
32 Remote control
Disclaimer
Manufacturer accepts no responsibility
for damage when using Remote Control.
You need to provide a secure
LAN environment shielded from the
internet through a firewall.

Remote control  yes
User           ****
Access code    ****
IP address     xxx.xxx.xxx.xxx
```

For more information about the remote control see application form: ANote-Remote-N-ENxxxxx.

Manufacturers CE Declaration of Conformity

Manufacturer: Stienen Bedrijfselektronica bv
Mangaanstraat 9
6031 RT Nederweert
the Netherlands

Type: FarmConnect interface

Model: WEB-485
Brand Stienen

Tests: EN 61000-3-2
EN 55014-1
EN 55014-2
EN 60355-1
EN 60204
EN 61010

Date of CE marking: June 22, 2018

As last amended by: EMC Directive 2014/30/EU
Low Voltage Directive 2014/35/EU
Machine Directive 2006/42/EC

Place of Issue: Nederweert,
the Netherlands

I hereby declare that the equipment above conforms to the above Directives and Standards, when installed in accordance with the manufacturer's specifications.



E.P.M. Stienen
Director
Stienen Bedrijfselektronica bv